


Measurement Report

Surface Texture Measurement

Auto Correlation of Roughness Dataset (Selection)

ZONA_1_2_2

$L_c = 800.000\mu\text{m}$

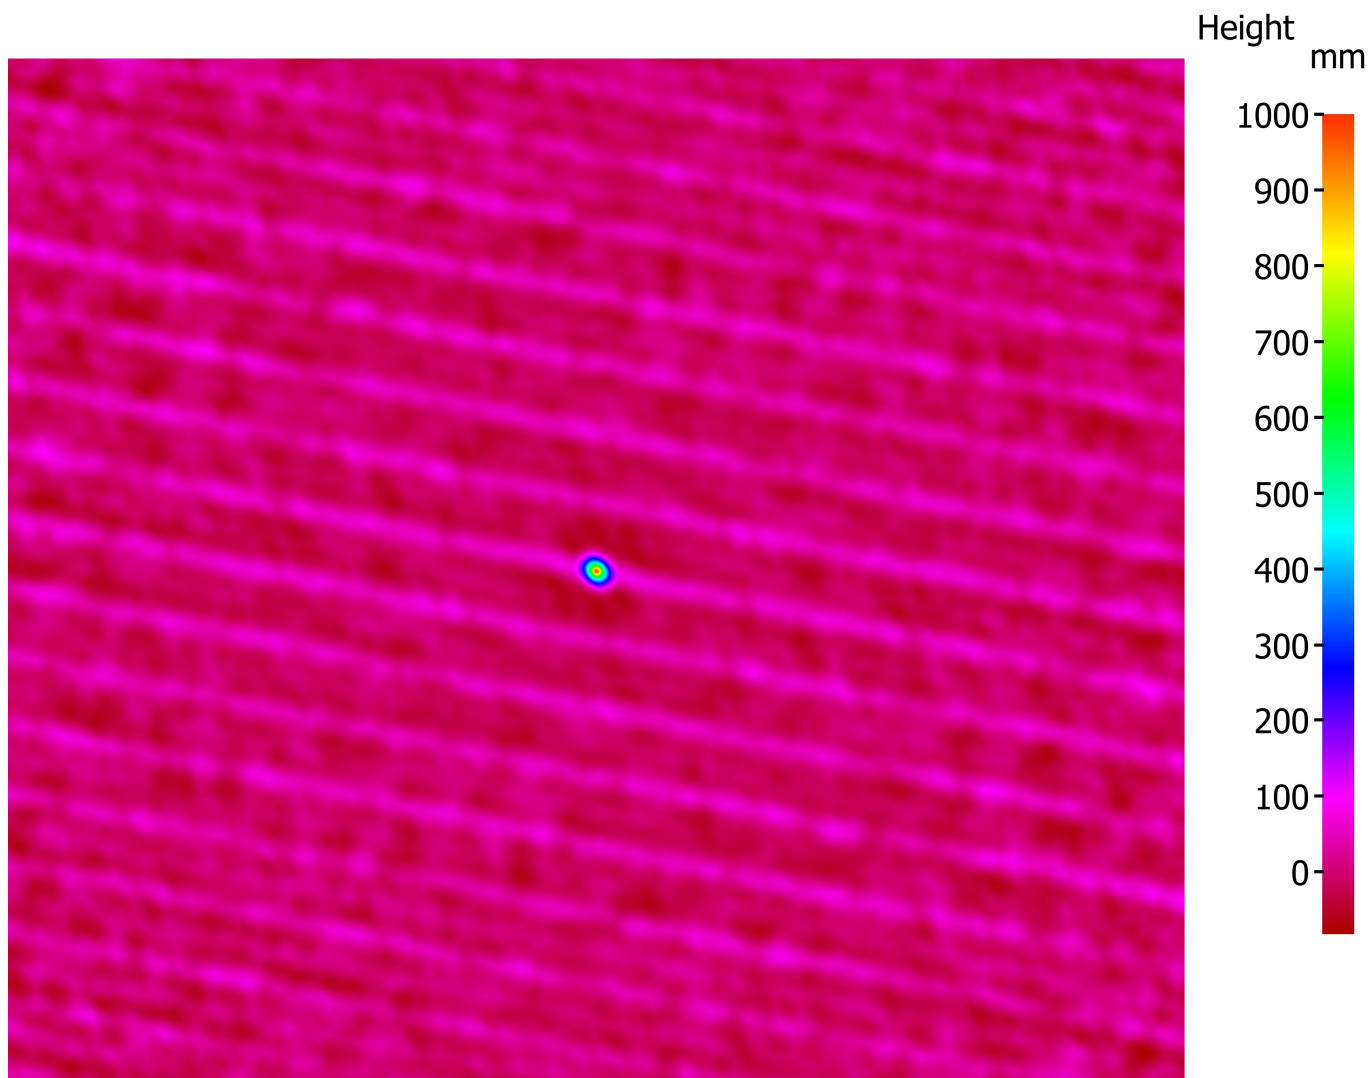

Name	Value	Unit	Description
Sal	65.001	μm	Auto correlation length. Horizontal distance of the auto correlation function (ACF) which has the fastest decay to the value 0.2. Large value: surface dominated by low frequencies. Small value: surface dominated by high frequencies.
Str	0.776		Texture aspect ratio ($0 \leq \text{Str} \leq 1$). Ratio from the distance with the fastest to the distance with the slowest decay of the ACF to the value 0.2. $\text{Str} < 0.3$: surface has a strong directional structure. $\text{Str} > 0.5$: surface has rather uniform texture.
Std	-11.900	$^\circ$	Texture direction ($^\circ$). Derived from the maximum of the angular power spectrum. $\text{Std} = 90^\circ$ means a dominant lay parallel to the y-axis.
Stdi	0.698		Texture direction index ($0 \leq \text{Stdi} \leq 1$). Average value of the angular power spectrum divided by the value of the dominating direction. Smaller values correspond to stronger directional structures.
angle	n.a.	$^\circ$	Manually measured angle