


# Measurement Report

## Surface Texture Measurement

### Auto Correlation of Roughness Dataset (Selection)

ZONA\_3\_1

Lc = 800.000µm

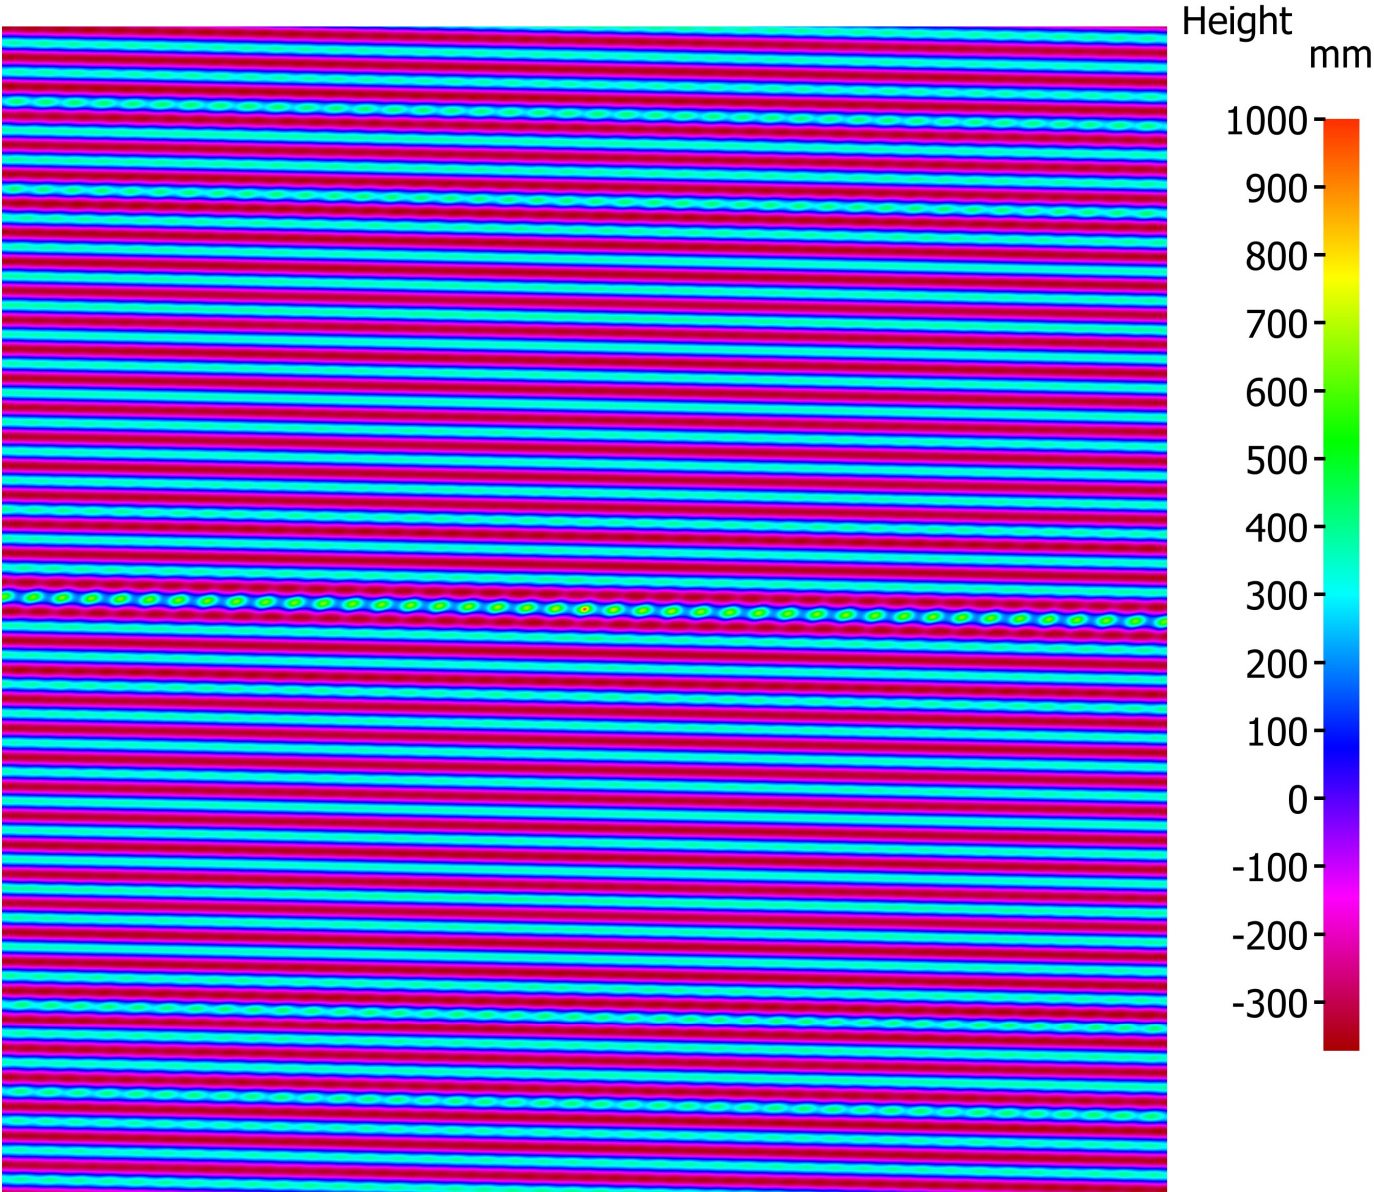

| Name | Value  | Unit | Description                                                                                                                                                                                                                                              |
|------|--------|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sal  | 20.631 | µm   | Auto correlation length. Horizontal distance of the auto correlation function (ACF) which has the fastest decay to the value 0.2. Large value: surface dominated by low frequencies. Small value: surface dominated by high frequencies.                 |
| Str  | 0.020  |      | Texture aspect ratio (0 <= Str <= 1). Ratio from the distance with the fastest to the distance with the slowest decay of the ACF to the value 0.2. Str < 0.3: surface has a strong directional structure. Str > 0.5: surface has rather uniform texture. |
| Std  | -1.400 | °    | Texture direction (°). Derived from the maximum of the angular power spectrum. Std = 90° means a dominant lay parallel to the y-axis.                                                                                                                    |
| Stdi | 0.266  |      | Texture direction index (0 <= Stdi <= 1). Average value of the angular power spectrum divided by the value of the dominating direction. Smaller values correspond to stronger directional structures.                                                    |

| Name  | Value | Unit | Description             |
|-------|-------|------|-------------------------|
| angle | n.a.  | °    | Manually measured angle |